



1171 West Notre-Dame
Victoriaville, Qc
CANADA
G6P 7L1

Telephone: (819) 751-0095 or (800) 203-9421
Fax: (819) 751-1292

BARCODE IMPORTANT SPECIFICATIONS

Documentation :26/09/2008



Use this documentation with the product : LBC-02

Our Internet site: [http:// www.symcod.com/](http://www.symcod.com/)

Programmer Analyst: Steve Bilodeau
Email: sbill@symcod.com

Barcode Specifications

- You must use the Symbology 3 of 9 or Code 128 (unless you have the B+ option)
- The density of the bar code must be within 15 and 19 mils (a mils is a 1/1000 inch).
- Ratio 2 for 1
- The decoder does not verify the checksum. If you need more security, you can add a control character which will be validated by your software
* See: *documentation on the checksum code 3 of 9 on www.symcod.com*
- Your terminal LBC-02 can read a maximum of 30 characters. However, for an optimum reading through the slot reader, the number of characters of the code should not exceed five.

Your cards must respect the following example:

**READING ZONE OF LB-02
YOUR BARCODE MUST FILL THE RED AREA**

